


XPert Pro QUICK START

Go to: www.XPOLE.com for full instruction manual |   

(Fig.1) Use below drawing as assembly reference

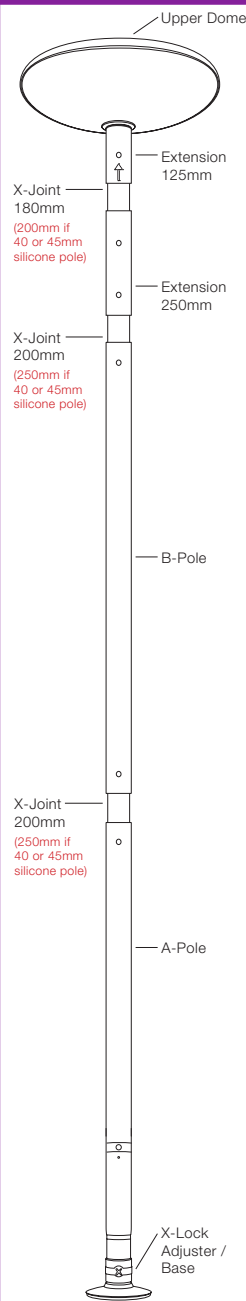

1

Box Contents.

(40 & 45mm) Pole set

A-Pole (with X-Lock)

B-Pole

Extension 250mm (10")

Top Insert

Extension 125mm (5")

X-Joint 200mm (8")

X-Joint 200mm (8")

X-Joint 180mm (7")

X-Joints supplied in 40mm Pole Sets & 45mm Silicone Pole sets

X-Joint 250mm (10")

X-Joint 250mm (10")

X-Joint 200mm (8")

6mm/5mm Hex Key

XPert Pro

Instruction Manual

Upper Dome

What you need before you start:

1x Tape Measure & 1 x Spirit Level

2

Measure the ceiling height at the point of use.

3

Select the extension(s) required to suit the measured height.

125mm

250mm

250mm

250mm

2260 - 2385mm
88.9" - 93.8"
7' 4" - 7' 9"

2385 - 2505mm
93.8" - 98.6"
7' 9" - 8' 2"

2505 - 2630mm
98.6" - 103.5"
8' 2" - 8' 7"

2630 - 2755mm
103.5" - 108.4"
8' 7" - 9'

Standard set heights 2260 - 2755mm (88.9" - 108.4")

Sizes achievable using the 125mm & 250mm extensions

All measurements include an allowance to enable you to assemble your pole as per the instruction manual

4

X-pole Must be installed under a rigid ceiling point as shown below.

5

It is **VERY IMPORTANT** to tighten hex screws progressively **ALTERNATING** between each one.

6

Install top insert & upper dome.

7

Get to know your X-pole adjustable parts.

8

To lock your X-LOCK and place it in to static mode, lift the X-LOCK collar and turn it clockwise.

9

Undo 3x adjuster lock hex screws a minimum of 3 complete turns.

10

Lift the pole into position under joist or selected point.

11

Turn A-pole anti/counter clockwise to extend to required height.

12

DO NOT! extend adjuster beyond the red 'O' ring. Add extension if 'O' ring is exposed.

13

Check pole is vertical, if not, loosen slightly then redo step 11.

14

Tighten firmly, It is **MANDATORY** that the red line is visible through the keyhole.

15

Tighten 3x locking hex screws.

16

Check sturdiness of pole with feet on & off the floor ensuring no movement.

17

To use pole on spin, lift X-LOCK collar and turn counter clockwise. Clockwise for locked.



READ - IMPORTANT WARNING: Installation & Use of the Xpert Pro Dance Pole is at the users discretion and it the users responsibility to check and the pole is installed correctly and safely before use. Safety is a priority at all times.